

FOR LOST OR STOLEN KEYS:

FOR A LOST PROGRAMMING KEY:

CONTACT YOUR DIGILOCK PRODUCT REPRESENTATIVE TO ORDER A REPLACEMENT PROGRAMMING KEY.

FOR A LOST MANAGER BYPASS KEY(S):

1) COLLECT ALL REMAINING MANAGER KEYS OR ORDER ADDITIONAL KEYS FROM YOUR DIGILOCK PRODUCT REPRESENTATIVE.

2) AT ONE LOCK PRESS **[C]** **[On]** **[5]** **[5]** **[On]**

THE LED WILL FLASH.

3) TOUCH THE PROGRAMMING KEY (RED) TO THE KEY SLOT FOR ONE FULL SECOND.

THE LED IS SOLID.

4) TOUCH THE PROGRAMMING KEY (RED) TO THE KEY SLOT FOR ONE FULL SECOND.

THE LED WILL TURN OFF AND ALL REGISTERED MANAGER KEYS WILL BE ERASED ON THE ONE LOCK.

5) FOLLOW INSTRUCTIONS "TO ADD ADDITIONAL MANAGER BYPASS KEYS." IF YOU HAVE MORE THAN ONE LOCK, CONTINUE WITH STEPS 6 AND 7.

6) FOLLOW INSTRUCTIONS "TO INITIALIZE NEW LOCKS: (STEP 2)."

7) FOLLOW INSTRUCTIONS "TO INITIALIZE NEW LOCKS: (STEP 3)."

TO OPERATE WITH A USER CODE:

TO UNLOCK:

1) PRESS: **[C]** **[]** **[]** **[]** **[]** **[On]**

(REGISTERED FOUR-DIGIT USER CODE)

(DEFAULT USER CODE IS **[1]****[2]****[3]****[4]**)

TO LOCK:

1) CLOSE THE DOOR

TO OPERATE WITH AN ADA USER KEY:

TO UNLOCK:

1) TOUCH A REGISTERED ADA USER KEY (BLUE) TO KEY TO THE SLOT.

TO LOCK:

1) CLOSE THE DOOR.

TROUBLESHOOTING

1) NO AUDIBLE FEEDBACK WHEN **[C]** BUTTON IS PRESSED:

A) THE BATTERIES HAVE FAILED- REPLACE BATTERIES LOCATED IN THE REAR UNIT.

B) POOR CONNECTION ON DOOR- REMOVE LOCK FROM DOOR AND REINSTALL.

C) THE LOCK IS IN "SLEEP STATE." TRY AGAIN AFTER ONE MINUTE..

2) LOCK DOES NOT UNLOCK:

A) LISTEN FOR ADDITIONAL AUDIBLE FEEDBACK FOR AN INDICATOR AS TO WHAT IS GOING ON.

B) TRY OPERATING WITH MANAGER BYPASS KEY OR PROGRAMMING KEY

C) CONTACT YOUR DIGILOCK PRODUCT REPRESENTATIVE OR DIGILOCK CUSTOMER SUPPORT.

3) LOCK EMITS 2 SETS OF THREE BEEPS DURING OPERATION:

A) LOW BATTERY INDICATOR- REPLACE BATTERIES LOCATED IN THE REAR UNIT.

4) LOCK EMITS 10 RAPID BEEPS DURING OPERATION:

A) BINDING INDICATOR- THE LOCK IS BINDING WITH THE STRIKE PLATE. PRESS FIRMLY ON THE DOOR WHILE OPERATING. IF BINDING IS A FREQUENT OCCURRENCE, THE STRIKE PLATE AND/OR DOOR HINGES NEED TO BE ALIGNED WITH THE LOCK.

TO CHANGE THE USER CODE:

1) PRESS: **[C]** **[On]**

2) INSERT A REGISTERED MANAGER BYPASS KEY (BLACK) TO KEY SLOT.

THE LED WILL TURN ON.

3) PRESS: **[C]** **[]** **[]** **[]** **[]** **[On]**

(NEW USER CODE)

4) PRESS: **[C]** **[]** **[]** **[]** **[]** **[On]**

(NEW USER CODE)

THE LED WILL TURN OFF.

TO REGISTER AN ADA USER KEY:

1) PRESS: **[C]** **[On]**

2) INSERT A REGISTERED MANAGER BYPASS KEY (BLACK) TO KEY SLOT.

THE LED WILL TURN ON.

3) INSERT AN ADA USER KEY (BLUE)

THE LED WILL TURN OFF.

TO OPERATE WITH THE MANAGER BYPASS KEYS:

TO UNLOCK:

1) TOUCH A REGISTERED MANAGER BYPASS KEY (BLACK) TO KEY SLOT.

TO LOCK:

1) CLOSE THE DOOR.

TO OPERATE WITH THE PROGRAMMING KEY:

TO UNLOCK:

1) PRESS: **[C]** **[On]**

2) INSERT PROGRAMMING KEY (RED) TO KEY SLOT.

TO LOCK:

1) CLOSE THE DOOR.

ADDITIONAL PRODUCT FEATURES

IF YOU HAVE THE HIGH SECURITY PLATFORM, THIS PRODUCT LINE IS CAPABLE OF AUDIT TRAIL WITH USE OF A SOFTWARE PROGRAMMING KIT. FOR ADDITIONAL INFORMATION REGARDING THIS FEATURE CONTACT YOUR DIGILOCK PRODUCT REPRESENTATIVE.

FOR ADDITIONAL PRODUCT AND/OR PRODUCT INFORMATION:



Assured Lock Tool & Supply

1-888-318-8940

Fax 1-941-761-9293

www.assuredlock.net

NOTE: THE LOCK WILL ACCEPT ONE USER CODE OR ONE ADA USER KEY.